

TRUNK FXS / LB



Trunk allows:

- To connect up to 4 LB telephone sets
- To connect to line interface of a PBX with loop signalling FXS
- AC signalling between LB Trunk and LB telephone, using ringing voltage
- Power supply from the host PBX 42V to 65 V, 300 mA
- Two-wire line between LB Trunk and LB phone

Features:

LB trunk ITX 422 41 is connected to PBX line interface (extension) with loop signalling. Line is connected to the LB telephone set or equivalent equipment.

LB trunk allows to connect up to 4 lines. The whole system is controlled by microcomputer. The card contains also protective elements against overvoltage on the tip and ring wire.

The board is usually powered from the host PBX. Power requirements are -42 to - 65 V DC, 300 mA.

The Management software is used for parameters setting.